

Roadpost Support Center

Portal > Knowledgebase > GeoPro > inReach Devices > Adjust inReach Monitoring Interval

Adjust inReach Monitoring Interval

David Jones - 2020-12-01 - in inReach Devices

The below steps cover adjusting the monitoring option for inReach devices. These steps do not apply to devices that use the standard check-in system. A description for monitoring and check-ins can be found [here](#).

1. Login to <https://geopro.globalalerting.com/>
2. Click on **Devices**
3. Click a device record
4. Click **Configure**
5. Click on **Monitoring**
6. Click the **Device Monitoring Interval** to select how often the device will need to check-in
7. Click the Device Monitoring Buffer menu to select how much time the device user will have to check-in. A minimum buffer of 15 minutes is recommended to account for the speed of satellite transmission.