

Roadpost Support Center

Portal > Knowledgebase > 9505A Handset > How-To > Sending a text message to an Iridium handset

Sending a text message to an Iridium handset

Lu Parente - 2016-12-20 - in How-To

Follow the steps below on how to send a text message to an Iridium handset.

Solution 1: Sending a text message using a cell phone

Using your cell phone, compose a new message.

In the recipient field, enter the full Iridium phone number starting with a **+** or **00**.

I.e. +881623412345 / 00881623412345

In the message field, enter your desired message and press **SEND**.

Solution 2: Sending a text message using Iridium messaging service

Navigate to <https://messaging.iridium.com/>

Enter the full Iridium phone number in the field, **8816...**

Enter your email reply address in the field, **Reply Email**

Enter your desired message in the field, **Message**.

Select the "**I'm not a robot**" check-box.

Press **Send Message** to send your message to the Iridium handset.

Iridium Messaging

Messaging

MDA

FAQ


Iridium.com


881623412345

support@roadpost.com

This is a test message

117 characters remaining

 I'm not a robot

 reCAPTCHA

[Privacy](#) - [Terms](#)

Send Message